



pro běžky

Délka lyže [cm]	150	160	164	165	166	170	172	174	175	179	180	181	182	185	187	189	190	194	195	197	200	201	205	208	210
FAVORIT	25-35	30-40			38-47						45-55			50-60			55-65		60-72		66-78		75-86		82-95
FAVORIT W					38-47						45-55			50-60			55-65		60-72		66-78				
ADVENTURE		50-60			60-70						70-80						79-88								
HIGHLANDER											50-60			55-65			61-70		66-77		72-93		80-91		87-100
FORESTER				60-70					70-80					78-90					89-97				95-102		
RANGER					65-75						75-87						86-94								
VEGA					30-40						40-50							60-70				70-80			
PERUN					60-75			75-90					85-100												
PERUN W					60-75			75-90					85-100												
RUBICON			65-80								90-105														
SPRINT Classic	22-29	25-35			30-40						40-50			50-60				60-70				70-80		80-90	
SPRINT Combi		30-40			40-48						45-55			55-65				65-75				75-78		85-95	
SPRINT Skate		30-40			40-50						50-60			60-70				70-80				80-90			
BOHEMIA XS Classic												60-70											90-100		
BOHEMIA XS Skate																									85-100

Tato tabulka je pouze orientační. Správnou déku lyží s ohledem na Váš lyžařský styl a terén, ve kterém se budete pohybovat, Vám pomůže vybrat odborný personál prodejny.

Výběr délek lyží s úvahou těchto informací se může od tabulky v některých případech lišit.